 


5 Projector Connection

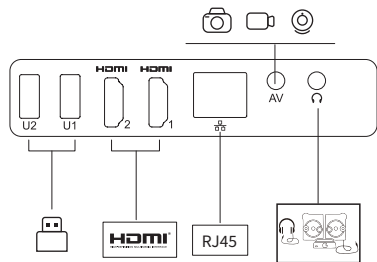

1. Selection of signal source
Press the signal source key "S" on the remote control to enter the signal source menu interface. Use the arrow keys and the confirm key to select the desired signal source.
2. Computer/Laptop Connection
Connect the computer/laptop through the projector:HDMI(high-definition interface)
Steps: switch the projector signal source > connect the corresponding data cable > switch the notebook output mode
Method: 1: XP system Fn + dual screen key (F1~F12 draws two screens), switch 2-3 times
Method 2: The computer/laptop operating system is Windows7 and above for users of Windows7,
Just press **Fn** +P on your keyboard, select the "Copy" option to connect. If the above operation doesn't work, please update your computer's graphics card driver.

Attachment: The output buttons of different brands of notebooks are as follows:

Lenovo	Fn+F3	Fujitsu	Fn+F10
Dell	Fn+F8	Haier	Fn+F3
HP	Fn+F4	NEC	Fn+F3
ThinkPad	Fn+F7	Panasonic	Fn+F3
Asus	Fn+F8	Sharp	Fn+F5
Acer	Fn+F5	Hitachi	Fn+F7
Samsung	Fn+F4	TOSHIBA	Fn+F5
Sony	Fn+F7		

3. AV video equipment connection
Connect the 3in1 video adapter cable to the AV interface of the projector, and select the multimedia signal channel: "AV".
4. 3.5mm audio device connection
It can be connected to 3.5mm headphones and other wired audio equipment.

6 Wireless Projection

IOS device

Airplay: Using this function, the projector and iPhone/iPad can be displayed on the same screen.

Note: Make sure the projector and the phone are connected to the same WiFi network (or the same hotspot).

The operation steps on the mobile terminal are as follows (the projection terminal does not need to be set);
Step 1: Swipe down at the bottom right of the phone screen
Step 2: The console interface appears, click the AirPlay button
Step 3: Select the device you want to cast to and turn on the mirroring switch

The name of the projection device can be defined in the screen projection APP, which is subject to the specific machine; it is recommended to connect 5G WiFi to get better effect.

Android device

Miracast: Using this function, the projector and Android phone/tablet can be displayed on the same screen Show.

The operation steps of the projector and mobile phone are as follows:

- Step 1:** Projector, go to Settings>Network Switch>Turn on WiFi Switch, no need to connect to the Internet network;
Step 2: On the mobile phone (take Xiaomi as an example), open the WiFi port, go to Settings > Other Connections Type>Wireless Display;
Step 3: During the connection process, a connection invitation appears on the projector, click Accept.

Different mobile phones have different Miracast setting paths and names. Common names are: Media Input Output/projection screen/multi-screen interaction, etc. Please refer to the mobile phone for details.

Note: Due to the variety of mobile phones, it cannot be guaranteed that all mobile phone models are compatible with the same screen.

7 Maintenance of the Projector

Smart projector is a high-tech product integrating precision optics, electronics and machinery. If it is not properly maintained in daily use, it will affect the performance of the projector, longevity and effectiveness.

The importance of maintaining the projector is as follows:

1. Dustproof: Due to the influence of the environment, excessive dust on the projector will affect the heat dissipation. Clean the dust filter of the projector in one and a half months in actual environment.

2. Ventilation: Since the projector is an integrated sound and photoelectric device, the light source generates heat when it works by itself. During installation and use, make sure that there are no objects around to block the entrance of the projector. The air vent and air outlet as the heat dissipation of the projector depends on the convection of cold air to improve the projector's performance, working, stability and longevity.

3. Lens maintenance: The lens is the core component of the projector, which is directly related to the clarity of the picture, sharpness and effect. Too much dust on the lens will affect the image quality. When the lens is dirty, please use a soft cotton cloth to wipe the glass on the surface of the lens, do not use a hard cloth or something corrosive wipe to the lens.

4. Cleaning: Please clean up the excessive dust on the surface of the projector, time to time as too much dust will affect on the projector body for heat dissipation.

5. Moisture-proof: The projector is easily attacked by humid air, and the working humidity of the projector is about between 45%-60%, the air is too humid and will affect the working stability of the projector.

6. Shockproof: The projector must be strictly prevented from strong impact, extrusion and vibration. Especially when the machine is on, try not to move and knock the projector during normal work, it may cause the internal electricity of the machine failure.

7. Do not install the projector on an unstable, shaky or uneven table.

8. Do not place containers filled with liquids on top of the projector.

8 Warranty Policy

The OTEK Projectors comes with a 1-year warranty against manufacturing defects, starting from the original purchase date, subject to the following conditions:

1. Customers must promptly notify the company in writing or call for any defects and provide the company or its authorized agent with sufficient opportunity to inspect, test, and address these defects. If requested, customers must deliver the goods, along with the original invoice, to the company's office or service center in the city where the purchase was made.
2. The company or its authorized dealer has the right to retain any defective parts replaced under the warranty.
3. The inspection and test report from the company's office or service center will be considered final and binding for determining defects, necessary repairs or alterations, and certifying the goods' functionality thereafter.
4. The company's liability under the warranty is limited to defects that occur under normal operation and proper use. It excludes defects caused by abuse, improper care or maintenance, unauthorized repairs or alterations, use with an unsuitable electrical supply, or damage from lightning or other electrical disturbances.
5. The company reserves the right to replace any defective device or component with a defect-free equivalent that ensures performance equal to or better than the original. The replaced defective device or component will become the property of the company.
6. The warranty does not cover personal injury, property damage, consequential damages, or improper use of the goods not aligned with the user manual.
7. If the product requires an upgrade due to reasons not within the company's control, the customer must accept the upgrade at the current rate.
8. Using non-standard accessories or accessories not recommended by OTEK will void the warranty.
9. After repair or replacement, the warranty period will remain unchanged, with no extension provided.
10. The company reserves the right to amend, extend, cancel, or discontinue these terms and conditions, or any part thereof, without providing reasons or prior notice.
11. Force Majeure: The company is not liable for non-performance of its obligations due to force majeure events, including acts of God, government orders or restrictions, war, labor disputes, riots, civil commotion, strikes, lockdowns, pandemics, explosions, or any other circumstances beyond its control.
12. All other terms and conditions related to the company's products will remain effective as stated.
13. Any disputes will be subject to the jurisdiction of Pune Courts only.

For Warranty Claim

Customer must raise a trouble ticket/case with OTEK to claim warranty. Please reach out to us via phone or WhatsApp at **702-702-5357** or **702-702-5857**, or email us at support@otekworld.com for assistance.



HD SMART PROJECTOR MODEL:Galaxy

QUICK GUIDE

STATEMENT

The projector is product grade A, in living Environment, the projector may cause wireless disturbance, may be users should do something effectively to the disturbance.



High brightness lamp!
Avoid staring or directly looking at the light, especially for children.



1. Please wash the anti-dust mesh once a month in order to protect your projector!
2. Before using this machine, please remove the protective membrane from the top & bottom cover.



"The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries."

Please read this GUIDE carefully before use;
The company reserves the right of final interpretation;
Appearance of the product and the UI please in kind prevail;
If product technology or software upgrades, without prior notice.

1 Safety Precautions

How to use the device correctly:

1. Do not point the lens towards the human eye to avoid damage to the eyes caused by the strong light of the lens after the machine is turned on.

2. Please do not block the air inlet/outlet of the device to avoid damage to the internal electronic devices due to the failure of the device to dissipate heat normally.

3. Do not use paper, cloth and other cleaning tools to directly wipe the lens to avoid damage to the lens; please use a cleaning air blower to remove dust on the surface of the lens.

4. Please keep the device and its parts and accessories out of the reach of children.

5. Please ensure that the device is used in a dry and ventilated environment.

6. Do not store and use the device in overheated or cold places. High (low) temperature will shorten the life of electronic devices; the allowable operating environment is 0°C~35°C.

7. Do not forcefully squeeze the device or place shields above or on its back to avoid damage to the device.

 
8. Do not drop, knock or strongly vibrate the device to cause damage to the internal circuit board.

9. Do not attempt to disassemble the device on your own; if there is any problem, please contact the after-sales service.

10. Do not repair any products by yourself; if the equipment or any parts are not working properly, you should consult the after-sales service or return to the factory for repair.

11. The equipment must not be exposed to water droplets or splashes, and objects filled with liquids such as vases should not be placed on the equipment.

2 Projector

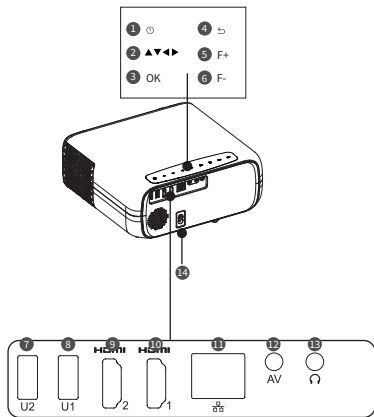


Note:
please refer to the product appearance, this figure is for reference only.

1. Power
2. Arrow Keys
3. Confirm
4. Back
5. Focus Plus
6. Focus Reduction
- 7/8. Multimedia Input
- 9/10. Video HD Input
11. Network interface
12. Audio, Video Input
13. Earphone/3.5mm Audio Output
14. Power Input(110-240V)

We reserve rights to change the specifications without any prior notice for upgradation/other purposes.

 
3 Remote Control Functions

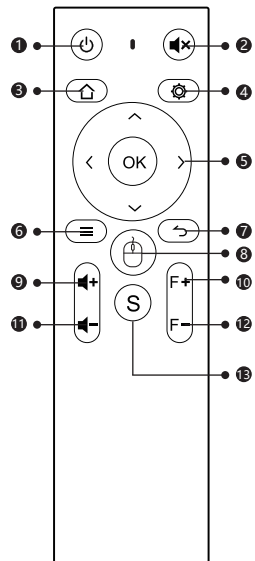

1. Power
2. Mute key
3. Home button
4. Set key
5. Arrow button
6. Menu
7. Return key
8. Mouse button
9. Volume up
10. Focus Plus
11. Volume down
12. Focus reduction
13. Signal

4 Device On/Off

 - 1: Plug the power cord into a power outlet.
- 2: Press the button "⏻" on the projector or on the remote control.

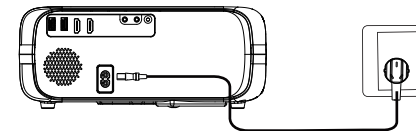


Automatic correction

1. This function is automatically turned on by default, and the screen can be kept square even after the device is displaced.
2. Press the menu key "☰", select Settings > Quick Entry > Settings > Keystone Correction > EsCalator shape can be set.

Auto focus

1. This function is automatically turned on by default. If the projector moves, it will trigger the gyroscope and start Auto focus, the picture automatically changes from blur to clear.
2. Press the autofocus key "📷" on the remote control, and the focus will be completed automatically.
3. If the autofocus effect is not satisfactory, press the manual focus key "F+" and "F-" on the remote control to fine-tune.

 Menu ▶ Quick entry ▶ Set up ▶ Keystone ▶ (Auto trapezoid)

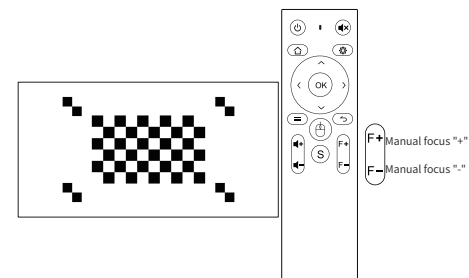

HD SMART PROJECTOR
MODEL:Galaxy